


LEANSTAR

CARPET BLOWER

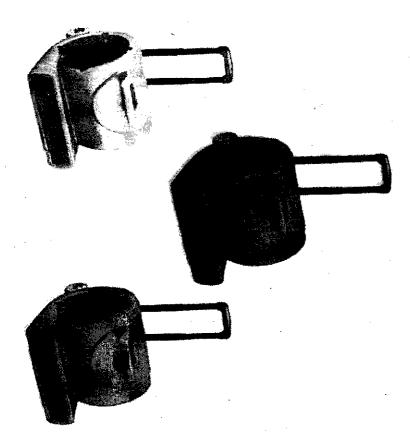



HW-900

Contents

Chapter I General Introduction

Thank you for purchasing the HW-900 This Product is easy and safe to use. It is ideal for drying and ventilation after the cleaning of carpet and other floor surfaces. It is particularly suitable for hotels, offices, halls and other large public spaces.

Chapter II Cautions

I. This product is not intended for use by persons (including children) with impaired physical, sensory or mental abilities or who lack the necessary experience and/or knowledge, unless they are supervised by a person responsible for their safety.

II. Ensure that children do not have access to the device when they are unsupervised.

III. Unplug the power cord from the socket before cleaning the product.

IV. If the power cord becomes loose or is damaged, please ask the manufacturer or a qualified technician to replace it.

 $\boldsymbol{V}.$ Unplug the device from the socket when not in use for extended periods of time.

VI. Assure the voltage and frequency of the power supply is the same as the device.

Chapter III Main Technical Parameters

Power: 900W

Voltage: 220V-240V~

Frequency: 50Hz

Air Quantity: 110. 120. 160m3/min

Fan Size: 270mm

Power Wire: 3×0.75 mm²×7m 3×1.0 mm²×7m

Package: 1 set/box

Model: H\

HW-900

blue red grey


Color:

Chapter IV Operation

I. The Carpet Blower has a 3 level switch labeled O, L, M and H. This stands for Off, Low, Medium and High respectively.

II. Make sure the switch is in the off position before the power is turned on at the wall, then you may select desired power level.

Cnapter v Product Drawing and Materials List

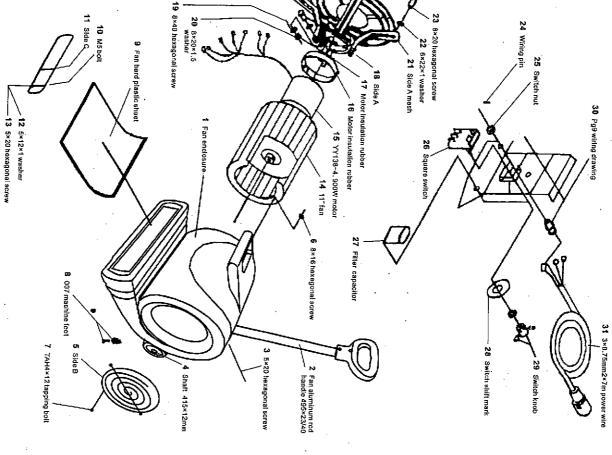

HW-900

Maintenance

The product is not waterproof, keep the is away from liquid to avoid electric

shock.

Please do not disassemble or replace the parts of the motor. If there are defects please take the product back to the place of purchase.

Chapter VII Troubleshooting

Replace the fan or fan enclosure	Fan is damaged during transportation, fan enclosure is distorted	Motor makes abnormal sound
Replace the capacitor	12.5UF capacitor is damaged	Motor starts slowly
Check power wire; @ Ask the manufacturer or professioal technician to repair.	① Power wire is not connected correctly;② Power switch is loose;③ Motor is damaged.	Mator doesn' t work
Solutions	Possible Reasons	Faults