 


Care & Maintenance

Caution: Prior to making any adjustments ensure the unit is turned OFF and unplugged, and the blades are stationary.

1. Disconnect the unit from the wall socket prior to cleaning the unit.
2. Remove the front and rear guards (1, 5) by removing the securing bolts (6 each side) located on the outer edges of the front and rear heavy duty guards (1, 5) (Fig. 6).
3. Clean the fan only with a slightly damp, soapy cloth, but ensure it is not too wet. After wiping down the unit with the soapy cloth, dry any wet spots with a dry paper towel or dry clean cloth.
4. Do not spray or rinse with any form of liquid and/or detergents.
5. Leave the fan to dry, and remount the front and rear guards (1, 5) back onto the fan, by securing the bolts removed in step.
5. Store the fan in a clean dry area when not in use.

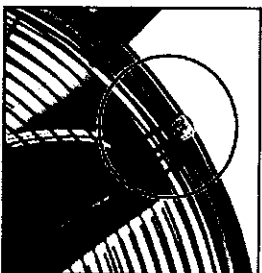

(Fig. 1)

Caring for the Environment

When a tool is no longer usable it should not be disposed of with household waste, but in an environmentally friendly way. Please recycle where facilities exist. Check with your local council authority for recycling advice. Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

WARRANTY INFORMATION

This warranty is provided by Total Tools (Importing) Pty Ltd 20 Thackray Road, Port Melbourne, VIC 3207 (we, us, our).

Express warranty

Subject to the exclusions set out below, we warrant that this product will be free from defects in materials or workmanship for a period of 12 months from the date of purchase.

The benefits conferred by this warranty are in addition to all rights and remedies which you may be entitled to under the Australian Consumer Law, and any other statutory rights you may have under other applicable laws. This warranty does not exclude, restrict or modify any such rights or remedies.

Warranty exclusions

This express warranty does not apply where a defect or other issue with the product is caused by normal wear and tear, misuse or abuse of the product.

Consumer guarantees

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty claims

To make a claim under this warranty, you must bring the product along with the proof of purchase and any other documentary evidence which you think is relevant to the Total Tools' place of purchase where the claim will be handled on our behalf. Any cost incurred by you in bringing the product to the place of purchase will be borne by you.

To make a claim under this warranty, the product and proof of purchase must be returned to the Total Tools place of purchase during the warranty period specified above.

If your warranty claim is accepted, we (or the Total Tools store that handles the claim on our behalf) will, at our discretion, repair or replace the product, or refund money to you and take back the product.

 


DETTROIT®

DETTROIT®


HIGH VELOCITY DRUM FAN TILTING

600MM DFD60
900MM DFD90

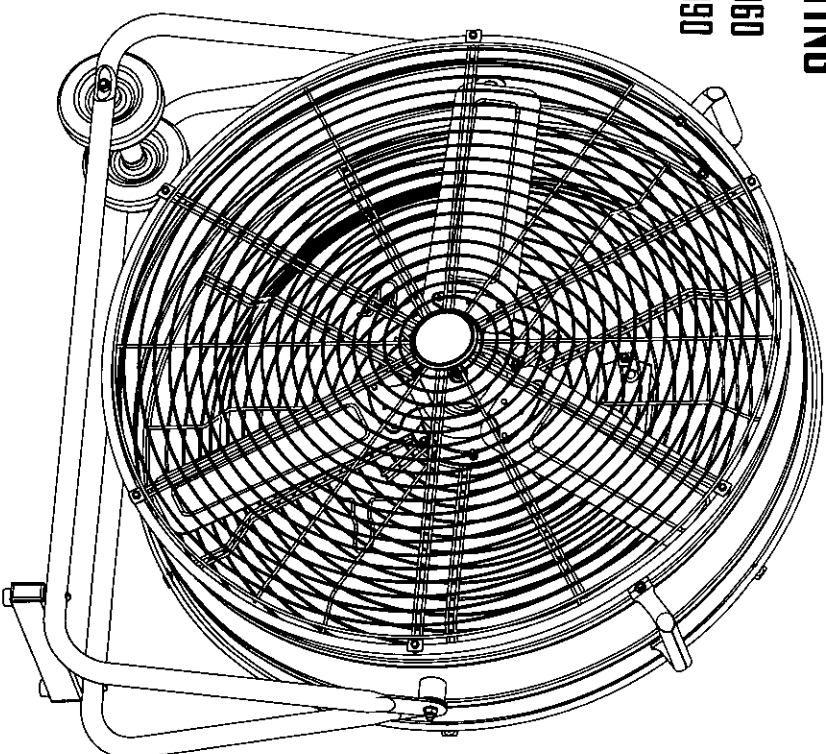

TO PREVENT SERIOUS INJURY, READ
AND UNDERSTAND ALL WARNINGS
AND INSTRUCTIONS BEFORE USE.

 OPERATING INSTRUCTIONS

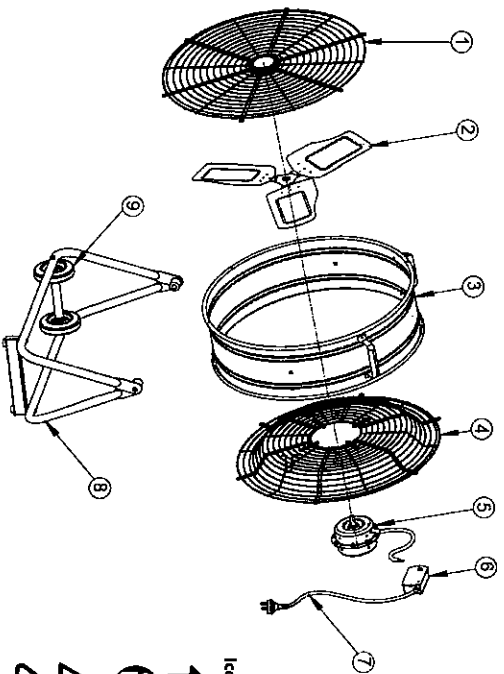

| Ref | Description | QTY |
|-----|-----------------|-----|
| 1 | Front Guard | 1 |
| 2 | Blade | 1 |
| 3 | Drum Body | 1 |
| 4 | Rear Guard | 1 |
| 5 | Motor | 1 |
| 6 | Switch | 1 |
| 7 | Power Cord | 1 |
| 8 | SUPPORTING Base | 1 |
| 9 | Wheels | 2 |

Icons On Product

The Floor Fan is intended for indoor use only.

Read the instruction manual before use.



Warning



Electromagnetic compliance (C-Tick) 5498

General Appliance Safety Warnings

 
Electrical Safety

- Power lead plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) appliance. Unmodified plugs and matching outlets will reduce risk of electric shock.
 - Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.
 - There is an increased risk of electric shock if your body is earthed or grounded.
 - Do not expose appliance to rain or wet conditions. Water entering an appliance will increase the risk of electric shock.
 - Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
 - If operating an appliance in a damp location is unavoidable, use a residual current device (RCD) protected supply.
 - Use of an RCD reduces the risk of electric shock.
 - Do not operate powered products in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Powered products create sparks which may ignite the dust or fumes.
 - Keep children and bystanders away while operating any powered products. Distractions can cause you to lose control.
- Service**
- Have your appliance serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the appliance is maintained.
- Fan Additional Safety Instructions**
- This Fan is not intended for use by persons (including children) with physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the Fan by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the Fan.
 - Carefully read all instructions before operating the fan for the first time and save for future reference.
 - Do not use this fan for anything other than its intended use. Do not use outdoors. Misuse may cause injury.
 - The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical Fans. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA.
 - To protect against electric shock, do not immerse the fan, cord or plug in water or any other liquid.
 - Disconnect the power plug before dismantling, assembling or before cleaning and when the fan is not in use.
 - Avoid touching the moving parts of the fan.
 - Ensure the fan is on a dry and even surface.

- Never insert fingers, pencils or any other objects through the guards.
 - The fan must have all guards assembled/fastened correctly, according to these instructions before use.
 - Do not operate in the presence of explosives and/or flammable fumes or liquids.
 - Never leave the fan running unattended.
 - Never carry the fan by the cord or pull the cord to disconnect from an outlet; instead, grasp the plug and pull to disconnect.
 - It is recommended to regularly inspect the Fan. To avoid a hazard do not use the fan if power cord, power plug or Fan becomes damaged in any way. Return the fan to the nearest authorised Service Centre for examination and/or repair.
- Risk of Electric Shock**
- Never touch the mains plug and the socket with wet hands.
 - Do not pull the plug from the socket by pulling on the power cable.
 - Check the power cord and mains plug for damage before every use.
 - To avoid accidents due to electrical faults we recommend the use of sockets with a line-side current-limiting circuit breaker (max. 30mA nominal tripping current).
 - Check the appliance and the power cord regularly for any possible damage.
 - Don't use damaged appliances.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Switch OFF power before removing the front or rear guard

Unpacking

1. Unpack all the components from the box.
2. When unpacking the Industrial Drum Fan, carefully inspect for any damage that may have caused during transit. Check for loose parts, missing parts or damaged parts.
3. Ensure all packaging materials are disposed of as per your local council guide lines.
4. The Industrial Drum Fan comes fully assembled, ready to plug and use. Therefore no assembly is required. (Fig. 1).

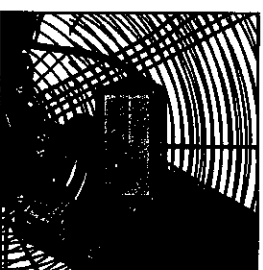

(Fig.1)

Operation

Caution: Prior to plugging in the fan ensure the 2 speed switch (6) is in the OFF (0) position.

1. Located at the rear of the motor fan is the 2 speed switch (6) (Fig.2)
2. Plug the fan into a wall socket and switch the socket ON.
3. Rotate the 2 speed switch to the desired speed 0 – OFF, 1 – LOW, 2 – HIGH.
4. To turn the unit OFF rotate the 2 speed switch to the OFF (0) position.
5. Adjust the direction of the air flow by moving from side to side and tilting the fan up or down as required.

(Fig.2)

